


# MEGAPIX®

## IP Cameras

- DWC-MPH2W28TW:** MEGApiX® IVA™ preloaded
- DWC-MPPH2W28TW:** MEGApiX® IVA+™ preloaded

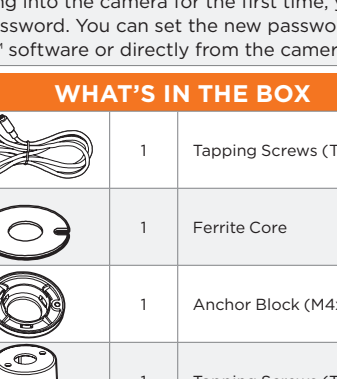

### Default Login Information: admin | admin

When logging into the camera for the first time, you must setup a new password. You can set the new password using the DW® IP Finder™ software or directly from the camera's browser menu.

## WHAT'S IN THE BOX

Item	Quantity	Item	Quantity
Camera Module and Cable (21.3ft/6.5m)	1	Tapping Screws (TP1 M3x20)	2 each
Double-Sided Tape for Pinhole Cover	1	Ferrite Core	1
Rotating Ring	1	Anchor Block (M4x2)	4 each
Pinhole Cover	1	Tapping Screws (TS M4x25)	5 each
4pin Terminal Block	1	Screws (TP2 M3x6(N))	2 each
Surface Mount Bracket	1	Cable Clamps	3 each
Pan/Tilt Bracket	1	Tapping Screws (TS M4x25)	3 each

**NOTE:** Download all your support materials and tools in one place

- Go to: <http://www.digital-watchdog.com/resources>
- Search your product by entering the part number in the 'Search by Product' search bar. Results for applicable part numbers will populate automatically based on the part number you enter.
- Click "Search": All supported materials, including manuals and quick start guide (QSGs) will appear in the results.

**Attention:** This document is intended to serve as a quick reference for the initial set-up. It is recommended that the user read the entire instruction manual for complete and proper installation and usage.

## SAFETY AND WARNING INFORMATION

Read through this Installation Guide carefully before installing the product. Keep the Installation Guide for future reference. See the user manual for more information on the proper installation, use and care of the product. These instructions are intended to ensure that users can use the product correctly to avoid danger or property loss. Warnings: Serious injury or death may occur if any of the warnings are neglected. Cautions: Injury or equipment damage may occur if any of the cautions are neglected.

- WARNING**
- In the use of the product, you must be strict compliance with the electrical safety regulations of the nation and region. When the product is mounted on a wall or ceiling, the device shall be firmly fixed.
  - Be sure to use only the standard adapter specified in the specification sheet. Using any other adapter could cause fire, electrical shock, or damage to the product.
  - Make sure the power supply voltage is correct before using the camera.
  - Incorrectly connecting the power supply or replacing the battery may cause an explosion, fire, electric shock, or damage to the product.
  - Do not connect multiple cameras to a single adapter. Exceeding the capacity may cause excessive heat generation or fire.
  - Securely plug the power cord into the power source. An insecure connection may cause a fire.
  - When installing the camera, fasten it securely and firmly. A falling camera may cause personal injury.
  - Do not install in a location subject to elevated temperature, low temperature, or high humidity. Doing so may cause fire or electric shock.
  - Do not install in humid, dusty, or sooty locations. Doing so may cause fire or electric shock.
  - Do not install near any heat sources such as radiators, heat registers, or other products (including amplifiers) to wipe it off.
  - Keep out of direct sunlight and heat radiation sources. It may cause a fire.
  - If any unusual smells or smoke come from the unit, stop using the product at once. Immediately disconnect the power source and contact the service center. Continued use in such a condition may cause fire or electric shock.
  - If this product does not operate normally, contact the nearest service center. Never disassemble or change this product in any way.
  - When cleaning the product, do not spray water directly onto parts of the product. Doing so may cause fire or electric shock.

- CAUTION**
- Use proper safety gear when installing and wiring the product.
  - Do not drop objects on the product or apply strong shock to it. Keep away from a location subject to excessive vibration or magnetic interference.
  - Do not use this product near water.
  - The product shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product.
  - Avoid aiming the camera directly towards extremely bright objects such as the sun, as this may damage the image sensor.
  - The M4x25 plug is used as a disconnect device and shall stay readily operable at any time.
  - Remove the power adapter from the outlet when there is lightning. Neglecting to do so may cause fire or damage to the product.
  - Do not block any ventilation openings. Install following the manufacturer's instructions.
  - Always use hardware (e.g. screws, anchors, bolts, locking nuts, etc.) compatible with the mounting surface and of sufficient length and construction to ensure a secure mount.
  - Use only with cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the product.
  - Unplug this product when a cart is used. Use caution when moving the cart/product combination to avoid injury.
  - Refer all servicing to qualified service personnel. Servicing is needed when the product has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the product, the product has been exposed to rain or moisture, does not operate normally, or has been dropped.

## STEP 1 – PREPARING TO MOUNT THE CAMERA

- The mounting surface must support five times the camera weight.
- Avoid allowing cables to become pinched or abraded during installation. If the plastic wire jacket of the electrical line is damaged, it could result in an electrical short or fire.
- CAUTION:** These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
- Ensure that this product is supplied power by a UL Listed Power Supply Unit marked "Class 2" or "LPS" or "PS2" and rated 12 Vdc, 0.30A or PoE (802.3af) 0.08A min.
- The wired LAN hub providing power via the Ethernet (PoE) in accordance with IEEE 802.3af shall be a UL Listed device with the output evaluated as a Limited Power Source as defined in UL60950-1 or PS2 as defined in UL62368-1. Unit is intended for installation in a Network Environment 0 as defined in IEC TR 62102. As such, associated Ethernet wiring shall be limited to inside the building.

## STEP 2 – POWERING THE CAMERA

Pass the wires through and make all necessary connections. See STEP 4 for more information.

- When using a PoE Switch or the PoE injector included with the camera, connect the camera using an Ethernet cable for both data and power.
- When not using a PoE Switch or the PoE injector included with the camera, connect the camera to the switch using an Ethernet cable for data transmission and use a power adapter to power the camera.


Power requirements	Power consumption
DC 12V, PoE IEEE 802.3af Class 3. (Adapter not included)	DCT2V: 3.6W PoE: 4W

Install the ferrite core on the LAN cable to reduce high-frequency noise:

- Open the ferrite core by lifting the closing clip.
- Make one loop with the cable through the ferrite core.
- Close the ferrite core to hold the cable loop in place.

## STEP 3 – INSTALLING THE MAIN UNIT


- Pull out the slide plates at the bottom of the main unit.
- Mark and drill the necessary holes in the mounting surface to align with the slide plates' holes.
- Align the main unit with the mounting holes and secure it to the mounting surface using the included tapping screws and anchors.

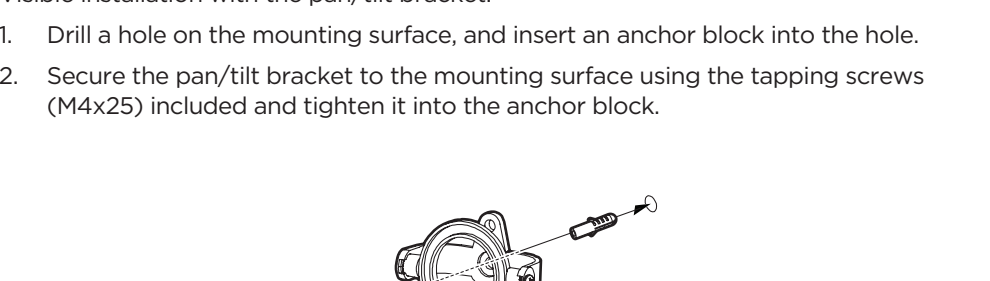


## STEP 3 – INSTALLING THE CAMERA MODULE

Concealed installation (Camera is mounted BEHIND the mounting surface, with the lens peeping through):

- Drill a hole (diameter: 0.11"/ 3mm) on the mounting surface where the camera lens will be installed.
- Peel off one side of the double-sided tape included with the camera, and attach it to the flat surface of the pinhole cover. Aligning the grooves on the tape with the screw holes on the pinhole cover.
- Peel off the other side of the tape, and stick to the mounting surface. Align the pinhole cover and the mounting surface, keeping the top screw at the top of the pinhole cover upright.
- Secure the pinhole cover to the mounting surface using the tapping screws (M3x20) included with the camera.
- Pass the camera's cable through the cable holder on the pinhole cover and place the camera module inside the pinhole cover. The camera lens should be facing the mounting surface, aligned with the 1mm hole drilled in #1. Tighten the top screw head to fix the camera module in place.
- Use the cable clamps to secure the camera's cable with a tapping screw (M4x20) included with the camera (optional).

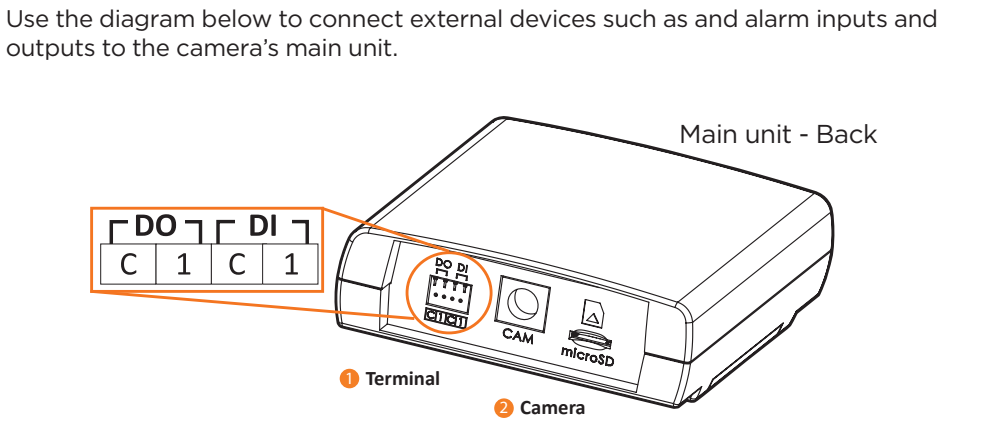


**Resetting the camera:** Press the reset button in the back of the main unit. Pressing the button for five (5) seconds will initiate a camera-wide reset of all the settings, including the network settings.

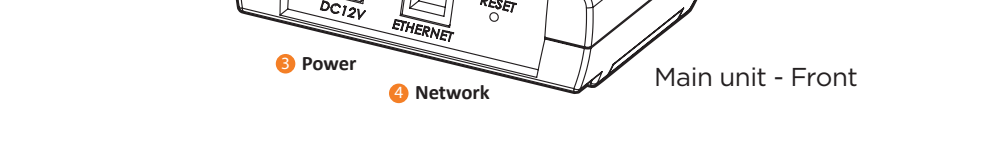


## Visible installation:

- Place the camera module on the installation surface.
- Pass the camera module's cable into the cable holder on the bracket and cover the camera module with the surface mount bracket.
- Secure the bracket to the mounting surface using the tapping screws (M3x20) and anchor blocks included with the camera.
- Use the cable clamps to secure the camera's cable with a tapping screw (M4x20) included with the camera (optional).

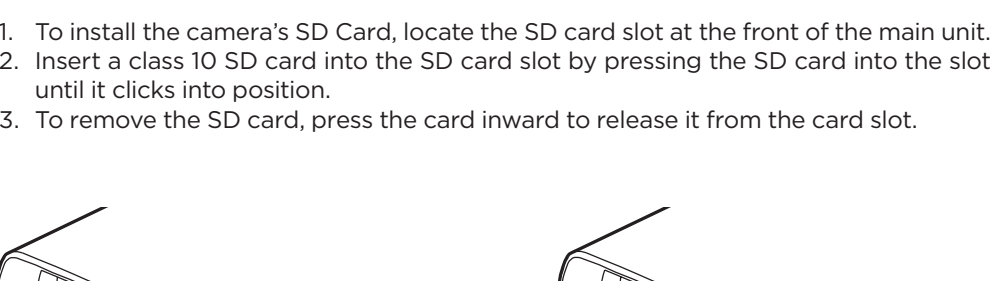


## Visible installation with the pan/tilt bracket:

- Drill a hole on the mounting surface, and insert an anchor block into the hole.
- Secure the pan/tilt bracket to the mounting surface using the tapping screws (M4x25) included and tighten it into the anchor block.
- Press the rotate ring into the bracket's mount ring.
- Place the camera module on the pan/tilt bracket. Make sure the lens is facing outward from the bracket.
- Secure the surface mount bracket on top of the camera module using the tapping screws (M3x6) included. Align the screw holes with the holes on the rotate ring on the pan/tilt bracket and tighten the screws to secure.
- Use the cable clamps to secure the camera's cable with a tapping screw (M4x20) included with the camera (optional).

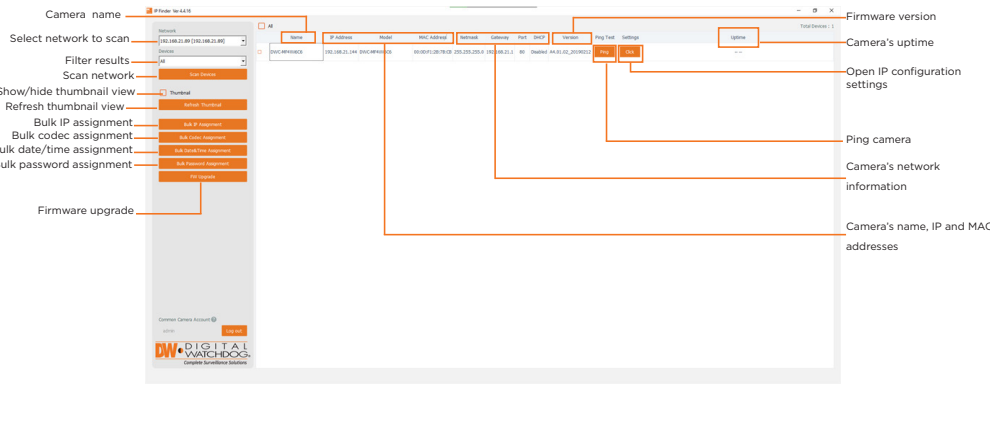

## STEP 4 – CABLING

Use the diagram below to connect external devices such as and alarm inputs and outputs to the camera's main unit.

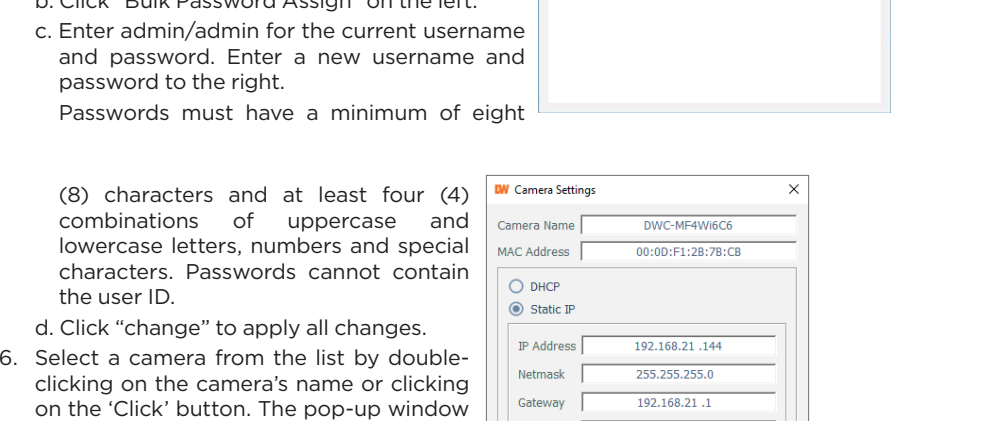

## STEP 5 – MANAGING THE SD CARD


- To install the camera's SD Card, locate the SD card slot at the front of the main unit.
- Insert a class 10 SD card into the SD card slot by pressing the SD card into the slot until it clicks into position.
- To remove the SD card, press the card inward to release it from the card slot.



**NOTE:** Maximum SD Card size supported: Up to 1TB micro SD / FAT32. When inserting the SD card into the card slot, the SD card's contacts should be facing upward, as shown in the diagram.

## STEP 6 – DW® IP FINDER™

Use the DW IP Finder software to scan the network and detect all MEGAPIX® cameras, set the camera's network settings or access the camera's web client.

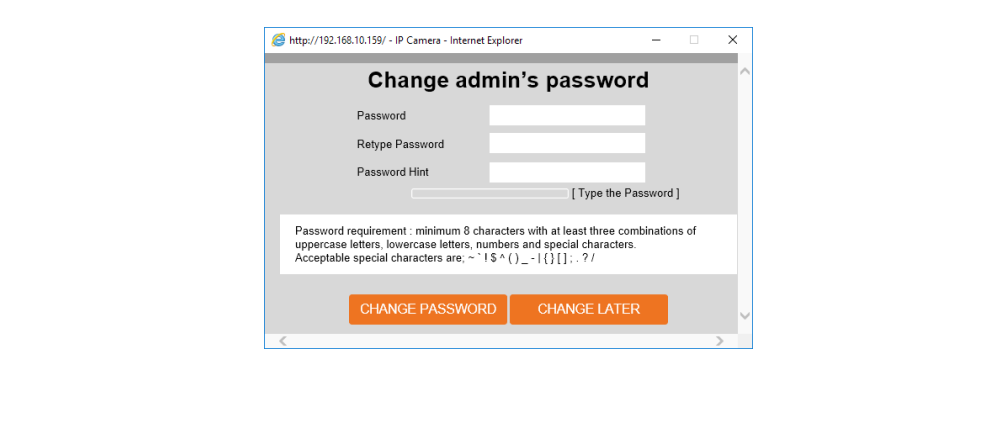

### Network Setup

- To install the DW IP Finder, go to: <http://www.digital-watchdog.com>
- Enter "DW IP Finder" on the search box at the top of the page.
- Go to the "Software" tab on the DW IP Finder page to download and install the installation file.
- Open the DW IP Finder and click "Scan Devices". It will scan the selected network for all supported devices and list the results in the table. During the scan, the DW™ logo will turn gray.
- When connecting to the camera for the first time, a password must be set.
  - Check the box next to the camera in the IP Finder's search results. You can select multiple cameras.
  - Click "Bulk Password Assign" on the left.
  - Enter admin/admin for the current username and password. Enter a new username and password to the right. Passwords must have a minimum of eight (8) characters and at least four (4) combinations of uppercase and lowercase letters, numbers and special characters. Passwords cannot contain the user ID.
  - Click "change" to apply all changes.
- Select a camera from the list by double-clicking on the camera's name or clicking on the "Click" button. The pop-up window will show the camera's current network settings. Admin users can adjust the settings as needed. The camera's network settings are set to DHCP by default.
- To access the camera's web page, click on the "Website" button.
- To save changes made to the camera's settings, enter the username and password of the camera's admin account and click 'Apply'.

- Select "DHCP" for the camera to automatically receive its IP address from the DHCP server.
- Select "Static" to manually enter the camera's IP address, (Sub)Netmask, Gateway and DNS information.
- The camera's IP must be set to static if connecting to Spectrum® IPVMS.
- Contact your network administrator for more information.
- To access the camera from an external network, port forwarding must be set in your network's router.

## STEP 7 – WEB VIEWER



\*The GUI display may differ by camera models.

- Find the camera using the DW IP Finder.
- Double-click on the camera's view in the results table.
- Press the 'View Camera Website'.
- Enter the camera's username and password you setup in the DW IP Finder. If you did not setup a new username and password, a message will direct you to setup a new password for the camera to view the video.
- When accessing the camera for the first time, install the VLC player for web files to view video from the camera.



**NOTE:** Please see the full product manual for web viewer setup, functions and camera settings options.

**NOTE:** This product is covered by one or more claims of the HEVC Patents listed at [patents.accessadvantage.com](http://patents.accessadvantage.com).

